

Correct use

Series CET-AX read heads are operated in combination with an evaluation unit in the system family CES-AZ. In this combination the read head CET-AX is an electromagnetic interlock device with guard locking and guard locking monitoring.

In combination with a safety guard and the machine control, this safety system prevents the safety guard from being opened while a dangerous machine movement is being performed.

For the control system, this means that

- ▶ starting commands which cause hazardous situations must become active only when the safety guard is in protective position and the guard locking is in locked position. The locked position of the guard locking must be released only when the hazardous situation is no longer present.

Before safety components are used, a risk assessment must be performed on the machine in accordance with

- ▶ EN ISO 13849-1, Safety of machinery. Safety related parts of control systems. General principles for design, Annex B
- ▶ EN ISO 12100, Safety of machinery - General principles for design - Risk assessment and risk reduction
- ▶ IEC 62061, Safety of machinery. Functional safety of safety-related electrical, electronic and programmable electronic control systems.

Correct use includes compliance with the relevant requirements for installation and operation, in particular

- ▶ EN ISO 13849-1, Safety of machinery. Safety related parts of control systems. General principles for design
- ▶ EN 1088, Safety of machinery. Interlocking devices associated with guards. Principles for design and selection
- ▶ EN 60204-1, Safety of machinery. Electrical equipment of machines. General requirements.

The read head is only allowed to be operated in conjunction with the intended EUCHNER CET actuators and the related connection components from EUCHNER. On the use of different actuators or other connection components, EUCHNER provides no warranty for safe function.

The read head CET is only allowed to be used in combination with a system family CES-AZ evaluation unit (see Table 2).

Important:

- ▶ The user is responsible for the integration of the device into a safe overall system. For this purpose, the overall system must be validated, e.g. according to EN ISO 13849-2.
- ▶ Correct use requires observing the permissible operating parameters (see Technical data).
- ▶ If a product data sheet is included with the product, the information on the data sheet applies in case of discrepancies with the operating instructions.
- ▶ The PL that can be achieved depends on the installation position and the evaluation unit used. Pay attention to the information in Table 2.

Exclusion of liability and warranty

In case of failure to comply with the conditions for correct use stated above, or if the safety instructions are not followed, or if any servicing is not performed as required, liability will be excluded and the warranty void.

Safety precautions

Safety components fulfill personal protection functions. Incorrect installation or tampering can lead to fatal injuries to personnel.

Check the safe function of the safety guard particularly

- ▶ after any setup work
- ▶ after the replacement of a system component
- ▶ after an extended period without use
- ▶ after every fault

Independent of these checks, the safe function of the safety guard should be checked at suitable intervals as part of the maintenance schedule.

⚠ Fatal injury due to incorrect connection or incorrect use.

- ▶ Safety switches must not be bypassed (bridging of contacts), turned away, removed or otherwise rendered ineffective. On this topic pay attention in particular to the measures for reducing the possibility of bypassing from EN 1088:1995+A2:2008, Section 5.7.

⚠ The device may be installed and put into operation only by authorized experts

- ▶ who are familiar with the correct handling of safety components
- ▶ who are familiar with the applicable EMC regulations
- ▶ who are familiar with the applicable regulations on health and safety and accident prevention
- ▶ who have read and understood the operating instructions and the system manual.

⚠ The switching operation must only be triggered by actuators specifically provided for this purpose (see Table 3) which are positively connected to the safety guard.

Function

In the read head there is a lift tappet (1) that contains the transponder (see Figure 1). The actuator has a spring-mounted guard locking pin (2) in which there is a CES actuator. The guard locking is active if the lift tappet is retracted and the guard locking pin is in the recess (3) on the read head.

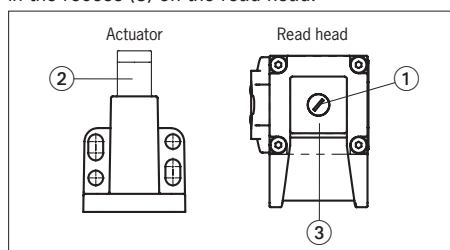


Figure 1: Read head and actuator

- ▶ Version CET1, guard locking by spring force

The lift tappet is pressed into the locked position by the force of the spring for the guard locking pin in the actuator and unlocked electromagnetically by the read head. The guard locking functions in accordance with the closed-circuit current principle. The locked safety guard cannot be opened immediately in the event of interruption of the power supply to the solenoid.

The actuator's guard locking pin cannot be moved out of the recess and the door is locked in the closed position as long as the lift tappet is pressed down by the guard locking pin.

When the operating voltage is present at the locking solenoid, the lift tappet is extended and lifts the actuator's guard locking pin above the edge of the recess. The safety door can then be opened.

- ▶ Version CET2, guard locking by solenoid force

⚠ The safety guard can be opened immediately in the event of interruption of the solenoid power supply! Usage only in special cases in accordance with strict evaluation of the accident risk (see DIN EN 1088 (1995), Section 5.5)!

Example: If the risk of accidental locking inside a safety guard during a power failure is higher than the risk of ineffective guard locking.

The lift tappet is initially extended by spring force. The spring force on the guard locking pin is not sufficient to press down the lift tappet. Only when the guard locking solenoid is also switched on does the lift tappet retract. The guard locking is active. The guard locking operates in accordance with the open-circuit current principle.

The safety door can be opened as long as the lift tappet is held in the extended position by spring force.

Releases

Important:

- ▶ The releases are not safety functions.
- ▶ The machine manufacturer must select and use a suitable release (escape release, emergency unlocking, etc.) for a specific application. A risk assessment appraisal is required for this purpose. It may be necessary to take specifications from a product standard into account.
- ▶ The releases must not be used to lock the switch during maintenance work to prevent activation of guard locking, for example.
- ▶ The correct function must be checked at regular intervals.
- ▶ Loss of the release function due to mounting errors or damage during mounting.
- ▶ Check the release function every time after mounting.
- ▶ Loss of the release function due to tension on the actuator. The door must not be under tension during release.
- ▶ Observe the notes on the enclosed data sheets.

Mechanical release and mechanical key release (can be retrofitted)

The mechanical release can be used to unlock guard locking, irrespective of the state of the solenoid.

Using mechanical release

1. Unscrew locking screw
2. Using a screwdriver, turn the mechanical release by around 180° in the direction of the arrow

➡ The safety device can be opened

The mechanical release must be returned to its original position and sealed after use (for example with sealing lacquer).

Using mechanical key release

On devices with mechanical key release (can be retrofitted), simply turn the key to unlock. For mounting, see the mechanical key release supplement.

Emergency unlocking (can be retrofitted)

Using emergency unlocking

Important:

The door must not be under tension when emergency unlocking is actuated.

- ▶ Turn emergency unlocking clockwise until it clicks into place.

- ➔ The safety device can be opened

To reset, press the detent bolt inward using a small screwdriver or similar tool and turn the emergency unlocking back.

Escape release (optional)

The escape release is used to open a locked safety guard from the inside (see dimension drawing in the section Technical data).

Fit escape release such that operation, inspection and maintenance are possible.

Using the escape release

- ▶ Press the red release knob to the stop

- ➔ The safety device can be opened

Pull the knob out again to reset.

Wire front release (optional)

The wire front release permits remote release of the guard locking via a pull rope. Flexible routing of the pull rope permits release of the guard locking in inaccessible installation situations.

Lockout mechanism (optional)

Important:

- ▶ The lockout mechanism is not a safety function.
- ▶ The correct function must be checked at regular intervals.

The lockout mechanism can be used to prevent maintenance personnel from being unintentionally locked in the danger area, for example.

In locked position, the lockout mechanism prevents activation of guard locking. The lockout mechanism can be secured in locking position with up to three locks. The mechanical release can still be used.

Using the lockout mechanism

Important:

Deactivate guard locking and open the safety door before using the lockout mechanism.

Before entering the danger area:

1. Open the door
2. Press button, move lockout mechanism to locking position (Figure 1 A and B) and secure with lock (Figure C)

- ➔ Guard locking cannot be activated, and it must not be possible to start the machine. Important: Test this before entering the danger area.

Resetting the lockout mechanism:

1. Open the safety door if necessary
2. Remove the lock
3. Move lockout mechanism to basic position (Figure 1 A)

Mounting

Caution:

Safety switches must not be bypassed (bridging of contacts), turned away, removed or otherwise rendered ineffective.

- ▶ On this topic pay attention in particular to the measures for reducing the possibility of bypassing according to EN 1088:1995.A2:2008, Sec. 5.7.

Caution:

Risk of damage to equipment as a result of incorrect installation. Safety switches must not be used as a mechanical end stop.

- ▶ Fit an additional end stop for the movable part of the safety guard.
- ▶ Observe the min. door radii (see Figure 3).
- ▶ Ensure that the actuator contacts the slide in the designated area (see figure below). Marks on the slide specify the prescribed approach zone.

Note the following points:

- ▶ Actuator and safety switch must be easily accessible for inspection and replacement.
- ▶ The switching operation must only be triggered by the specific actuator designated for this purpose.
- ▶ Actuator and safety switch must be fitted so that the actuator is positively mounted on the safety guard, e.g. by using the safety screws included.
- ▶ they cannot be removed or tampered with using simple means.
- ▶ the active faces of the actuator and the safety switch are parallel to each other (see Figure 3).
- ▶ the actuator is fully inserted into the switch recess when the safety guard is closed (see Figure 3).

Changing the approach direction


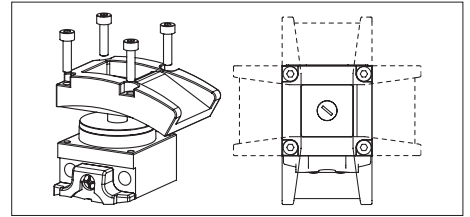


Figure 2: Changing the approach direction

- ▶ Remove the screws from the read head.
- ▶ Set the required direction.
- ▶ Tighten the screws with a torque of 1.5 Nm.

Protection against environmental effects

A lasting and correct safety function requires that the actuating head must be protected against foreign bodies such as swarf, sand, blasting shot, etc., which can become lodged in the recess. For this purpose, the read head should be installed with the actuating head facing down.

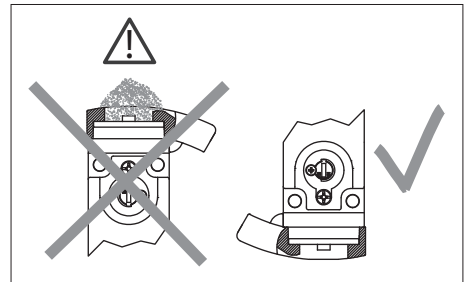

Cover the actuating head, the actuator and the rating plate during painting work!

Electrical connection

- ⚠ The read head CET is only allowed to be used in combination with a suitable EUCHNER connection cable (see Table 1). The connection cable contains two screened cores for the signal from the read head. This screening must not be interrupted on the route to the evaluation unit or earthed at any other point (see Figure 8).

- ⚠ All the electrical connections must either be isolated from the mains supply by a safety transformer according to IEC EN 61558-2-6 with limited output voltage in the event of a fault (PELV), or by other equivalent isolation measures.

For use and operation as per the requirements, a power supply with the feature "for use in class 2 circuits" must be used. The same requirement applies to the safety outputs.

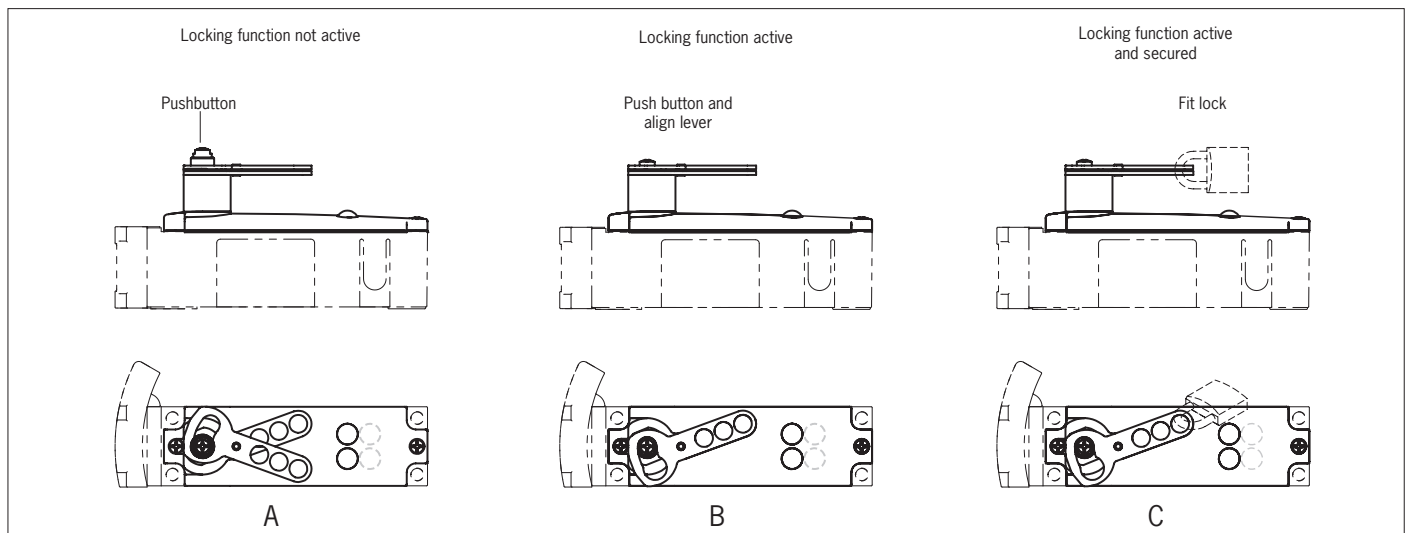


Figure 1: Function of lockout mechanism

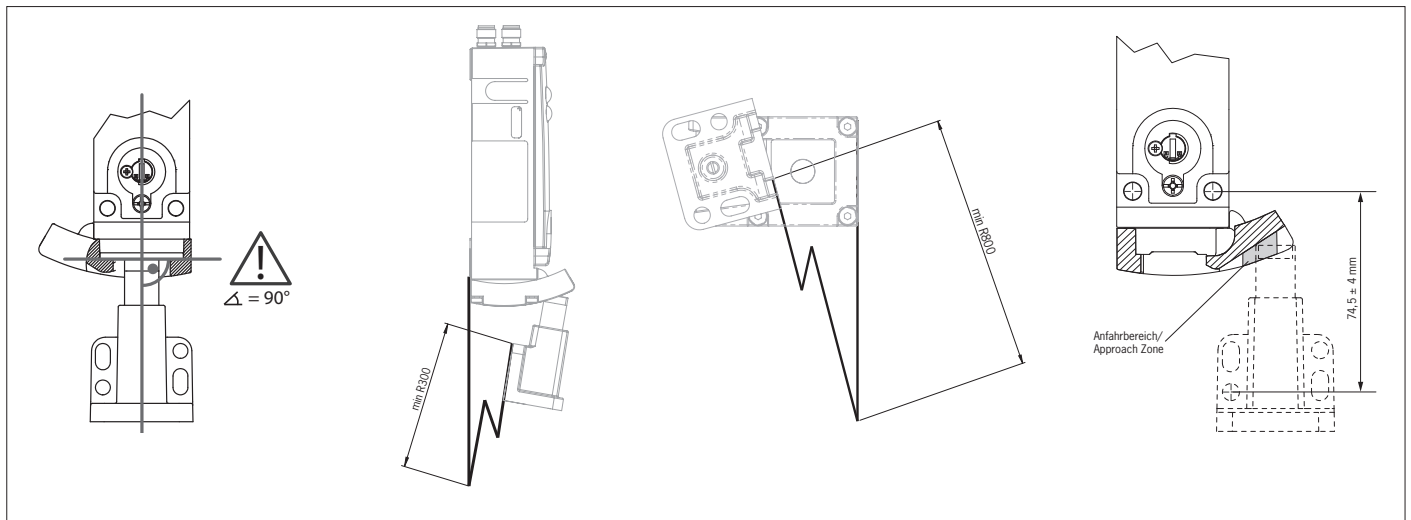


Figure 3: Door radii and approach zone

Alternative solutions must comply with the following requirements:

- ▶ Electrically isolated power supply unit with a max. open-circuit voltage of 30 V/DC and a limited current of max. 8 A.
- ▶ Electrically isolated power supply unit in combination with fuse as per UL248. This fuse should be designed for max. 3.3 A and should be integrated into the 30 V DC voltage section.

In order to avoid EMC interference, the physical environmental and operating conditions at the installation site of the device must comply with the requirements according to the standard EN 60204-1:2006, section 4.4.2 (EMC).

- ▶ For terminal assignment see Figure 4.
- ▶ For detailed information see the system manual for the evaluation unit used.

Setup and functional check

Pay attention to the information in the system manual for the evaluation unit used during setup.

- ⚠ Danger of fatal injuries as a result of faults in installation and functional check.**
- ▶ Before carrying out the functional check, make sure that there are no persons in the danger area.
 - ▶ Observe the valid accident prevention regulations.

▶ Mechanical function test

The actuator must slide easily into the recess on the actuating head. Close the safety guard several times to check the function.

▶ Electrical function test

After installation and any fault, the safety function must be fully checked. Proceed as follows:

1. Switch on operating voltage.
 - ▶ The machine must not start automatically.
2. Close all safety guards.
 - Guard locking by solenoid force: Activate guard locking.
 - ▶ The machine must not start automatically. It must not be possible to open the safety guard.
3. Enable operation in the control system.
 - ▶ It must not be possible to deactivate the guard locking as long as operation is enabled.
4. Disable operation in the control system and deactivate guard locking.
 - ▶ The guard locking must remain active until there is no longer any risk of injury.
 - ▶ It must not be possible to start the machine as long as the guard locking is deactivated.

Service and inspection

Warning:

Loss of the safety function because of damage to the system.

In case of damage, the entire device must be replaced.

Only accessories or spare parts that can be ordered from EUCHNER may be replaced.

Regular inspection of the following is necessary to ensure trouble-free long-term operation:

- ▶ Check the switching function (see section Functional check)
- ▶ Check all additional functions (e.g. escape release, lockout mechanism, etc.)
- ▶ Check the secure fastening of the devices and the connections
- ▶ Check for soiling

No servicing is required, repairs to the device are only allowed to be made by the manufacturer.

Note:

The year of manufacture can be seen in the lower right corner of the type plate.

Exclusion of liability under the following circumstances

- ▶ incorrect use
- ▶ non-compliance with safety regulations
- ▶ installation and electrical connection not performed by authorized personnel
- ▶ failure to perform functional checks.

Technical data

▶ Read head

Parameter	Value
Material	Stainless steel
- Slide	Die-cast aluminum
Installation position	Any (recommendation: actuating head downward)
Degree of protection acc. to IEC 60529	IP67 (screwed tight with the related mating connector)
Mechanical life	1 x 10 ⁶ operating cycles
Ambient temperature	-20 ... +55 °C
Actuator approach speed, max.	20 m/min
Locking force, max.	6,500 N
Locking force F_{th} in acc. with GS-ET-19	$F_{th} = \frac{F_{max}}{1.3} = 5,000$
Weight	Approx. 1 kg
Degrees of freedom X, Y, Z	X, Y ± 5 mm; Z ± 4 mm
Switching frequency	1 Hz (this value can deviate depending on the evaluation unit used. See system documentation of the related evaluation unit)
Connection	See Figure 4
Rated insulation voltage U_i	50 V
Rated impulse withstand voltage U_{imp}	1.5 kV
Solenoid	
Connection	Reverse polarity protected
Solenoid operating voltage/ Solenoid power consumption	DC 24 V +10% -15% 10 W
Duty cycle	100 %

▶ Actuator

Parameter	Value
Housing material	Stainless steel
Installation position	Active face opposite read head
Degree of protection acc. to IEC/EN 60529	IP67
Mechanical life	1 x 10 ⁶ operating cycles
Ambient temperature	-20 ... +55 °C
Locking force, max.	6,500 N
Weight	Approx. 0.25 kg
Stroke max.	15 mm
Door radius, min.	300 mm
Power supply	Inductive, via read head

▶ LED

Parameter	Value
Connection voltage	24 V ± 15 % (reverse polarity protected)
Current consumption, max.	6 mA

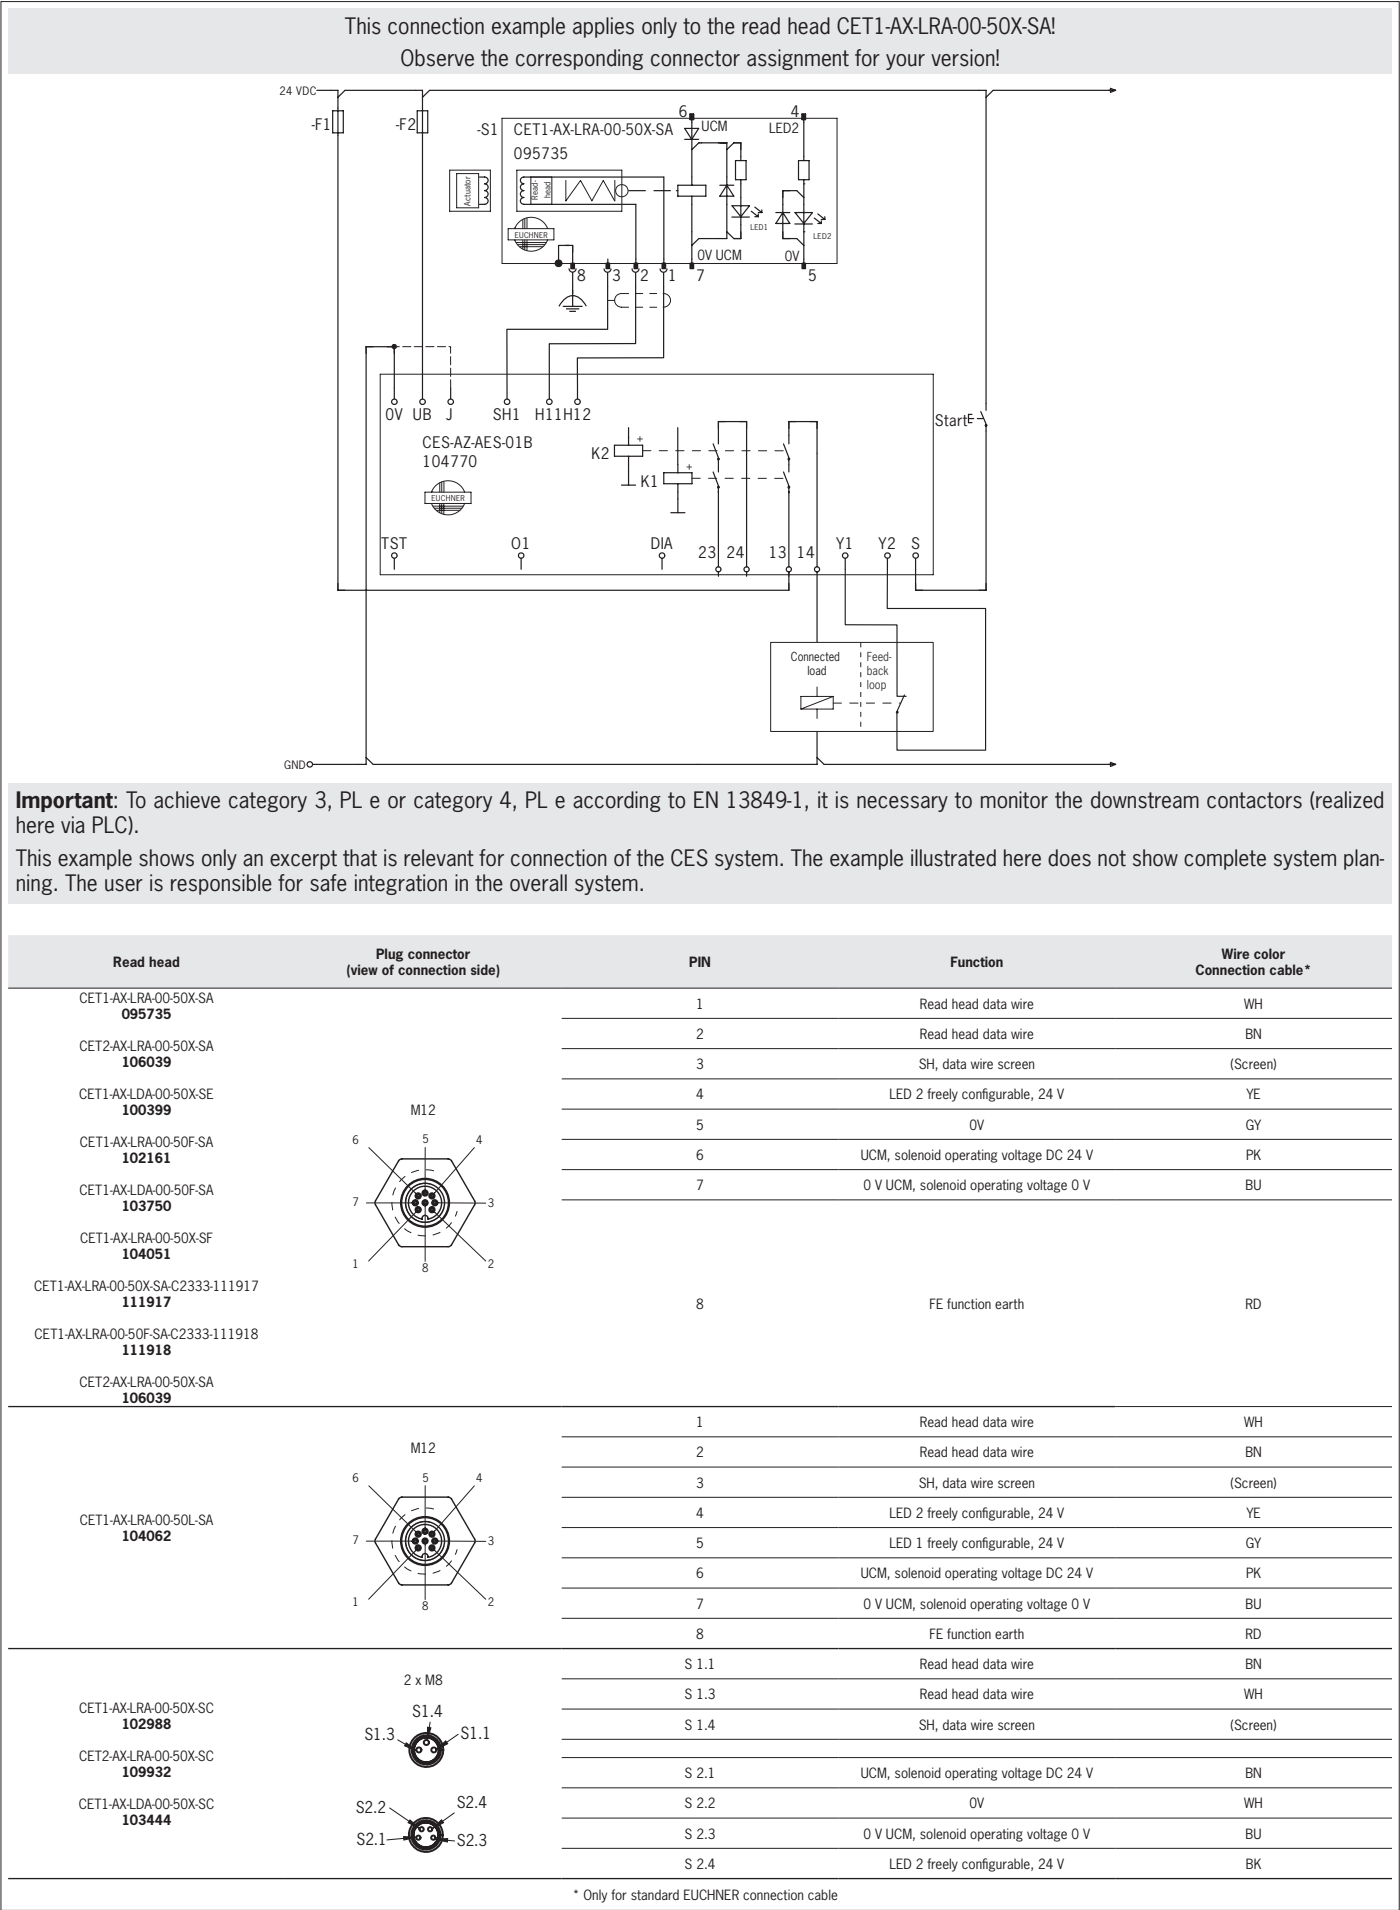


Figure 4: Connection example and terminal assignment

Sheath	Plug connector	Cable length [m]	Order no.
PVC	Straight	10	099633 C-M12F08-07X025PV10,0-MA-099633
		20	099634 C-M12F08-07X025PV20,0-MA-099634
		25	103115 C-M12F08-07X025PV25,0-MA-103115
	Angled	10	100456 C-M12F08-07X025PV10,0-MA-100456
		20	105071 C-M12F08-07X025PV20,0-MA-105071
		25	102218 C-M12F08-07X025PV25,0-MA-102218
PUR	Straight	10	102218 C-M12F08-07X025PV10,0-MA-102218
		25	103782 C-M12F08-07X025PV25,0-MA-103782

Table 1: Ordering table connection cables


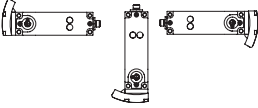
Read head/ order number	Evaluation unit/ order number	Installation position	Achievable category and PL according to EN ISO 13849-1
CET-AX-...	CES-AZ-ES-...	Head upward 	3 / PL e In this installation position the PFH _d value of the system (evaluation unit + read head) reduces to 4.29 x 10 ⁻⁸
		Head downward or horizontal 	4 / PL e In this installation position the PFH _d value for the system (evaluation unit + read head) is the same as that for the evaluation unit

Table 2: Combination options

Order no. / item	Closed-circuit current principle	Open-circuit current principle	Plug connector M12	2 plug connectors M8	Single insertion slide	Double insertion slide	Escape release	Lockout mechanism	2 LEDs (1 freely configurable)	2 LEDs (2 freely configurable)
095735 CET1-AX-LRA-00-50X-SA	●		●		●				●	
100399 CET1-AX-LDA-00-50X-SE	●		●			●			●	
104051 ¹⁾ CET1-AX-LRA-00-50X-SF	●		● ¹⁾		●				●	
104062 CET1-AX-LRA-00-50L-SA	●		●		●					●
102161 CET1-AX-LRA-00-50F-SA	●		●		●		●		●	
103750 CET1-AX-LDA-00-50F-SA	●		●			●	●		●	
111917 CET1-AX-LRA-00-50X-SA- C2333-111917	●		●		●			●	●	
111918 CET1-AX-LRA-00-50F-SA- C2333-111918	●		●		●		●	●	●	
106039 CET2-AX-LRA-00-50X-SA		●	●		●				●	
102988 CET1-AX-LRA-00-50X-SC	●			●	●				●	
103444 CET1-AX-LDA-00-50X-SC	●			●		●			●	
109932 CET2-AX-LRA-00-50X-SC		●		●	●				●	
096327 CET-A-BWK-50X	Actuator, locking force 6,500 N (incl. safety screws)									
073456 M5x16/V100	Safety screws M5 x 16 for actuator (replacement), packaging unit: 100 ea.									

1) Plug connector can be rotated by 360°.

Table 3: Ordering table read heads and actuators

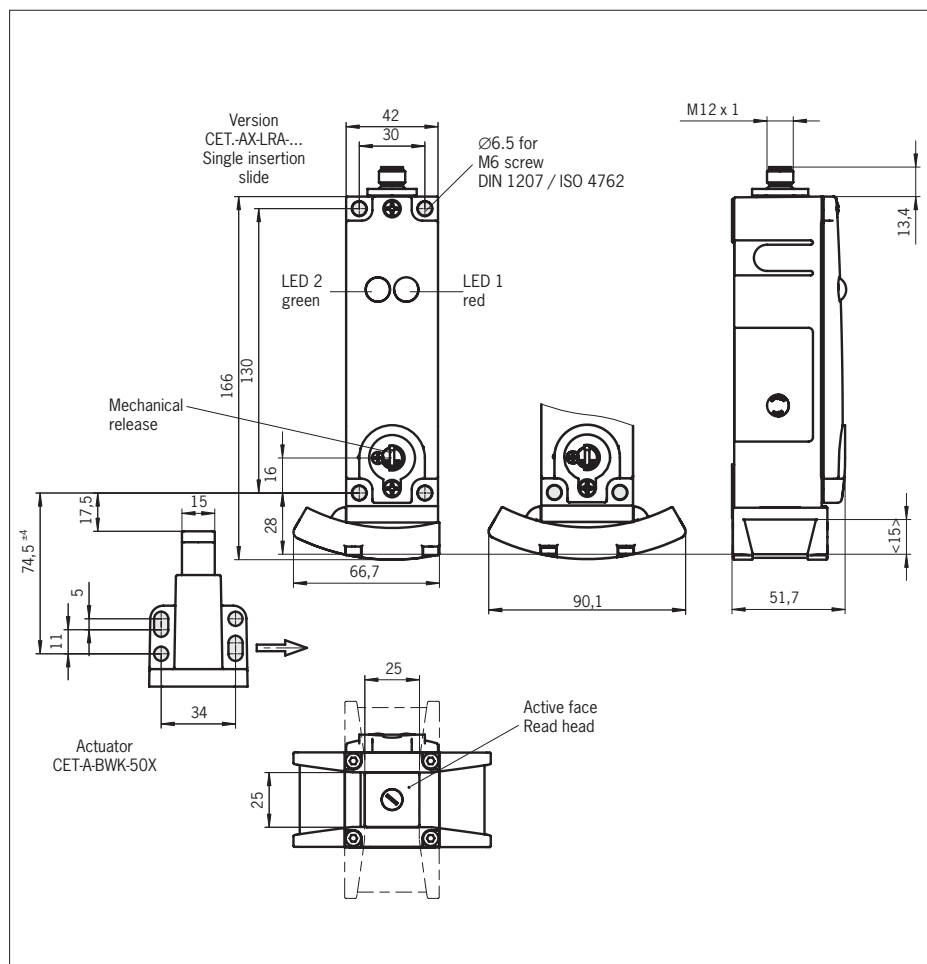


Figure 5: Dimensions with plug connector M12

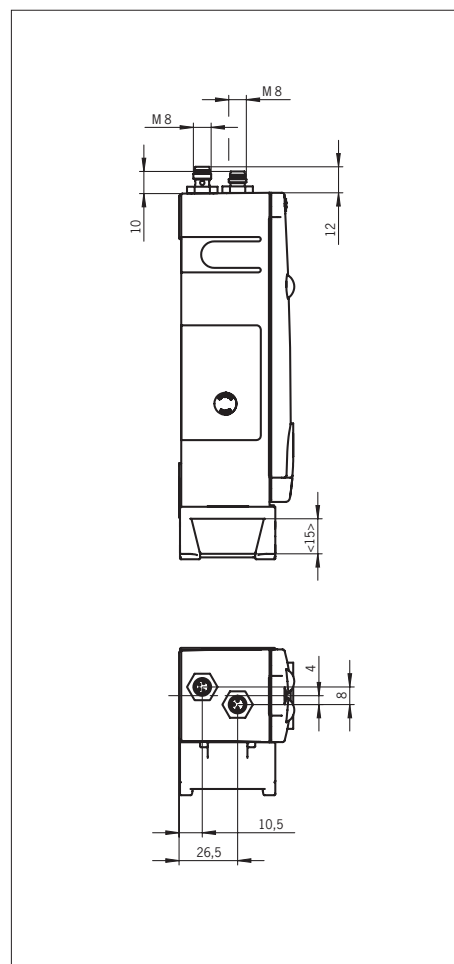


Figure 6: Dimensions with 2 plug connectors M8

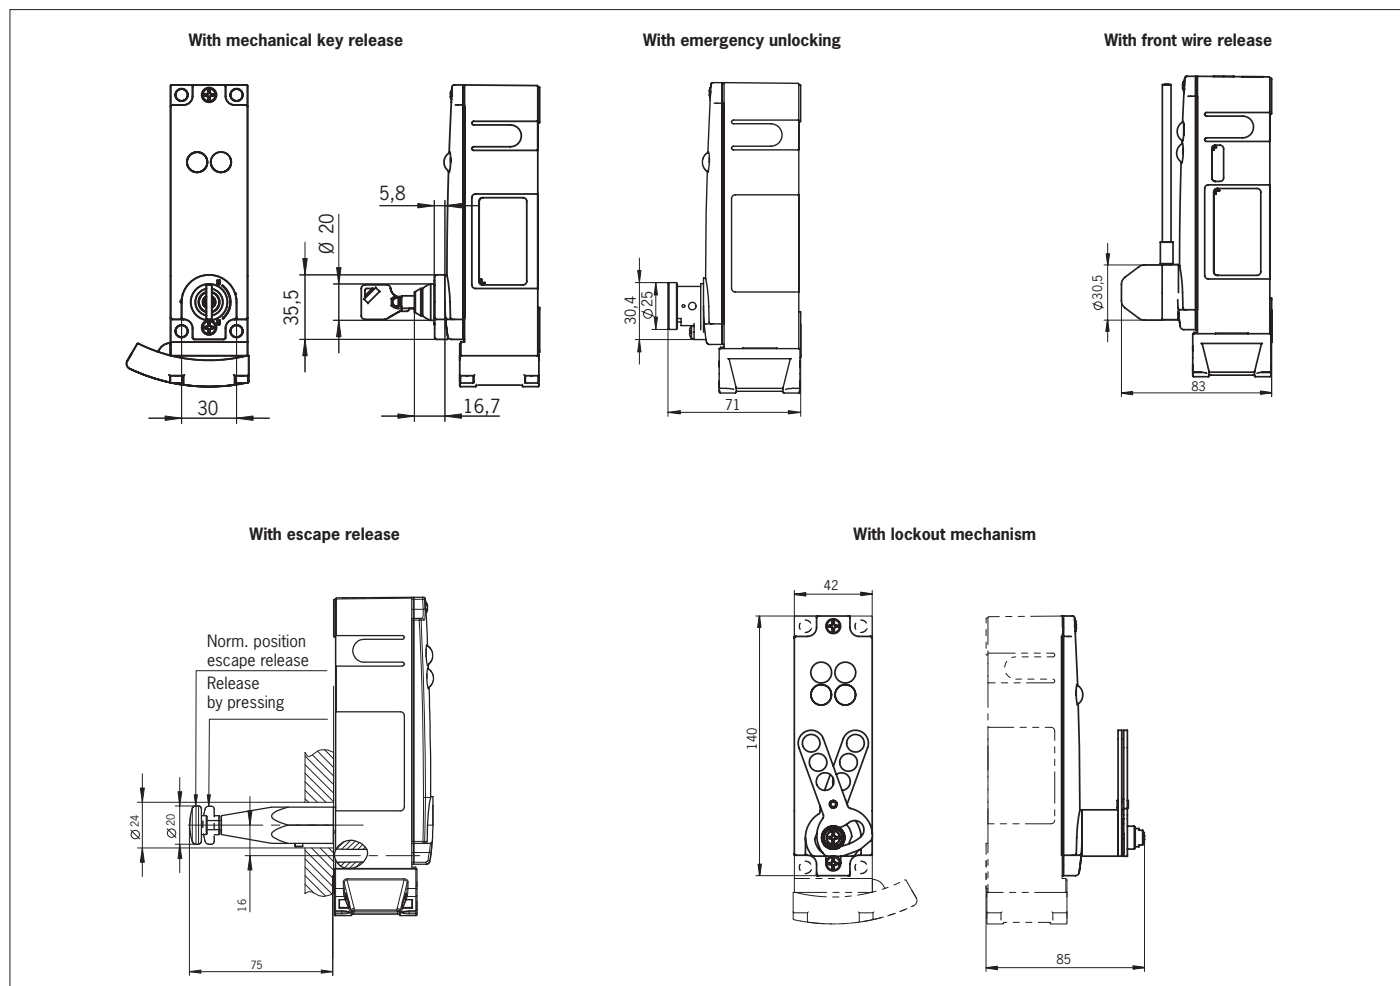


Figure 7: Dimensions with mechanical key release, emergency unlocking, front wire release, escape release and lockout mechanism

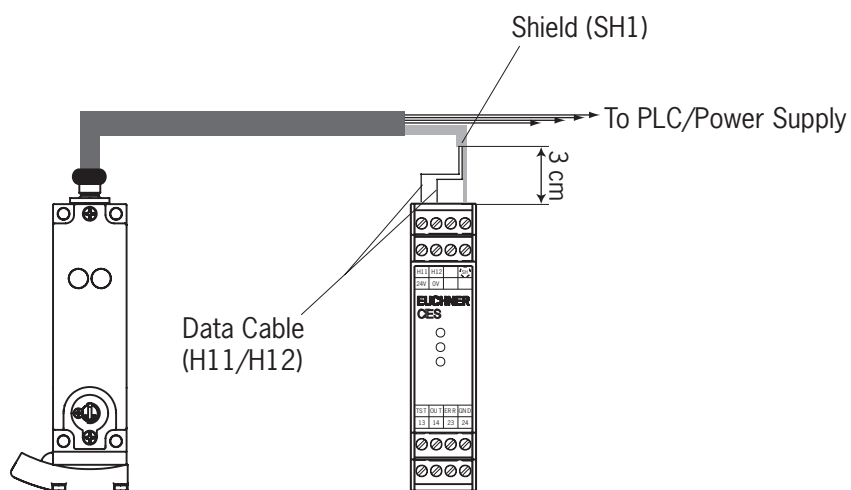


Figure 8: Connection to meet EMC requirements